



Portable Kit

Features

- Simple single-room pressure indication for all pressurized healthcare spaces - works for both permanent and temporary spaces
- Portable, hand-held kit to easily move around and check isolation environments
- · Visual alarm via red/green light ring
- · Silent operation, no audible alarm
- Offset light pipe that can be seen at an angle or down a hallway
- Digital display can be always-on or momentary
- · Full configuration is easy, using just 3 buttons
- Verify pressure where continuous monitoring is not yet in place and accessory wiring is not yet available

Accurate measuring & display

Setra Lite provides a simple, cost-effective, and accurate way to measure and display room differential pressure in areas today that require manual verification. For local staff managing an area, Setra Lite has a light ring that is green or red, showing a clear indication of room conditions.

Setra Lite features

Setra Lite has many features found only in larger, more complex room pressure monitors. These include a bright light ring that can be seen at an angle or down a hallway, a digital display of the pressure value that is always-on or momentary, an alarm delay for door entry, and POS or NEG room mode. The Setra Lite sensor has Setra's accuracy and reliability you know you can trust.

Portable usage

The Setra Lite Portable Kit is a hand-held battery powered kit that can be brought around to emergency enclosures to verify pressure. The outside port on the monitor is held in hand outside of the enclosure, then the filtered tubing is connected to the monitor and placed into the enclosure to take the differential pressure reading.

Applications

Ideal solution for emergency installations, including:

- Emergency ICU tents
- · Mobile Field Hospitals
- · Recently re-configured rooms



Pressure indication



Simple green status



Red indicates alarm











Specifications

Physical description

Dimensions	3.42" W x 4.88"H x 1.83"D
	(67 mm x 124 mm x 46.5 mm)
Mounting	No mounting necessary. Hold vertically when taking a reading
Case	Fire-retardant plastic UL94 V-0 and medica grade tubing
Weight	8 oz (0.5 lbs)
Display	Color: RGB, 65K Resolution: 128x160, backlight: LED
Alarm indication	Red illuminated LED light ring , 11mm standoff from faceplate, viewable at 90° angle from side
Performance	
Accuracy ¹	±0.5% FS
Non-linearity (BFSL)	±0.44% FS
Hysteresis	±0.10% FS
Non-repeatability	0.05% FS

Non-repeatability	0.05% FS
Span Tolerance	±1% Rdg
Thermal effects ²	
Zero shift %FS/°F (°C)	±0.033 (±0.06)
Span shift %FS/°F (°C)	±0.033 (±0.06)
Long-term stability	±0.5% FS per year
Overpressure	±1 PSI (15" WC for <0.10" WC FS)
Pressure media	Air or non-conductive, non-explosive gases
Pressure fittings	3/16" barbed fitting

Environmental data

Position

Operating temp. °F (°C)	32 to 120 (0 to 50)
Storage temp. °F (°C)	-20 to 160 (-30 to 70)
Operating humidity	5 to 95% RH (non-condensing)
Ingress protection (IP) rating	IP54

Hold in hand vertically when taking reading

Display

Light ring	Green, red, or off
Numeric value	4 digits

Features

Re-zero	Single press-and-hold to re-zero sensor
Alarm thresholds	Set numeric threshold in "WC or Pa
Door delay	Set door alarm delay for 0-999 seconds
POS or NEG indicator	Set display to show POS, NEG, or off
Display on/off	Set display to always-on, or momentary press to show pressure value
Significant digits	1,2, or 3 after decimal point, POS or NEG
Light ring	Set LED ring to 1). steady green, steady red if alarm, 2). Green OFF, and steady red if alarm 3). always of
Units	Set units on the display to show "WC or Pa

Electrical

Power	24 VAC (+/-10%) 24VDC (18-32) 50-60 HZ 9V battery pack included
Power draw	2W max, 1W typical
Analog output ³	Set for 0-5V, 0-10V, or 4-20mA signal
Wire	Stranded unshielded twisted-pair, 18-24 AWG
Terminals	Fixed, non-removable

Regulatory compliance

CE, RoHS


¹ RSS of non-linearity, non-repeatability, and hysteresis

 $^{^{\}rm 2}$ Units calibrated at nominal 70°F maximum thermal error computed from this datum

 $^{^{\}rm 3}\,{\rm Zero}$ tolerance negated by zero push button




Ordering information




[1]	
Model	
229990	Temporary Portable Kit

Includes

- LITER25WBD (+/- 0.25" WC Unit)
- Battery Pack
- 10 feet of filtered medical grade tubing

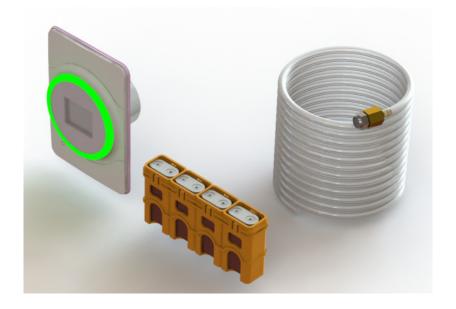

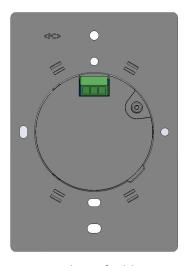

Rear view of wiring/ pressure port



Setra Systems, Inc. 159 Swanson Road Boxborough, MA 01719

800.257.3872

www.setra.com

© Setra Systems, Inc. All rights reserved.

The Setra Systems name and logo are trademarks of Setra Systems, Inc.