

7.0 RETURNING PRODUCTS FOR REPAIR

When returning a product to Setra Systems, the material should be carefully packaged and shipped prepaid to:

Setra Systems, Inc.
159 Swanson Road
Boxborough, MA 01719-1304
Attn: Repair Department

To assure prompt handling, please refer to return instructions on our Web site at http://www.setra.com/tra/repairs/cal_rep.htm.

8.0 WARRANTY AND LIMITATION OF LIABILITY

SETRA warrants its products to be free from defects in materials and workmanship, subject to the following terms and conditions: Without charge, SETRA will repair or replace products found to be defective in materials or workmanship within the warranty period; provided that:

- the product has not been subjected to abuse, neglect, accident, incorrect wiring not our own, improper installation or servicing, or use in violation of instructions furnished by SETRA;
- the product has not been repaired or altered by anyone except SETRA or its authorized service agencies;
- the serial number or date code has not been removed, defaced, or otherwise changed; and
- examination discloses, in the judgment of SETRA, the defect in materials or workmanship developed under normal installation, use and service;
- SETRA is notified in advance of and the product is returned to SETRA transportation prepaid.

Unless otherwise specified in a manual or warranty card, or agreed to in writing and signed by a SETRA officer, SETRA pressure, humidity, and acceleration products shall be warranted for one year from date of sale.

The foregoing warranty is in lieu of all warranties, express, implied or statutory, including but not limited to, any implied warranty of merchantability for a particular purpose.

SETRA's liability for breach of warranty is limited to repair or replacement, or if the goods cannot be repaired or replaced, to a refund of the purchase price. In no instance shall SETRA be liable for incidental or consequential damages arising from a breach of warranty, or from the use or installation of its products. No representative or person is authorized to give any warranty other than as set out above or to assume for SETRA any other liability in connection with the sale of its products.

setra

159 Swanson Road, Boxborough, MA 01719-1304
Tel: 800-257-3872/978-263-1400
Email: sales@setra.com; Web: www.setra.com

Setra Model SRH Relative Humidity Sensor Series Installation Instructions

1.0 GENERAL INFORMATION

Every SRH humidity sensor product is tested and calibrated before shipment. Setra's Humidity Sensor family consists of a wall mount, duct mount, and outside air unit. This product line expands the solution opportunities for the HVAC/building automation market and other relative humidity monitoring applications. All models utilize a field-replaceable sensor module, NIST traceability, accuracies of $\pm 2\%$, $\pm 3\%$, $\pm 5\%$, and a durable capacitive sensor capable of full-scale 0 to 100% RH measurement.

2.0 MECHANICAL INSTALLATION

2.1 Environment

The operating temperature limits of the SRH model are as follows:

Operating Temperature Range -40°F to 140°F (-40 to 60°C)

Storage Temperature -40°F to 185°F (-40 to 85°C)


2.1 Wall Mount

It is important to find a place within a room where the transmitter can be exposed to unrestricted air circulation that will represent the average humidity and temperature within that space. Try to avoid any locations that may be exposed to fumes, extreme temperatures, and high moisture content. Also, make sure the location is on an indoor wall that is about 4 to 6 feet above the floor. For ease of mounting, the wall mount humidity transmitter was designed to install onto a standard electric switch box.




Model SRH
Wall Mount Unit

Top View

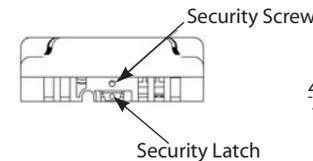

Front View

To open wall unit, back out the security set screw (if used), then press the security latch inward and lift-up cover.

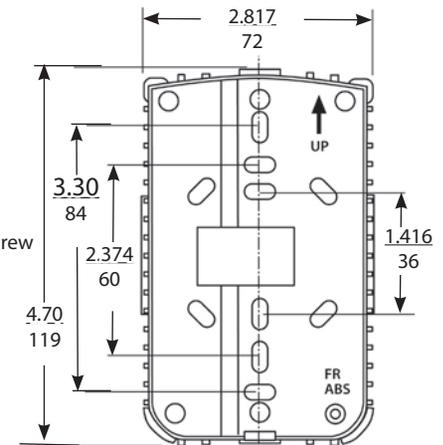


Wall Mount - Back Plate

in.
mm

2.2 Duct Mount


For proper operation, it is necessary to locate the transmitter in the center of a section of duct that receives adequate air flow. Conversely, it must be free of fans, corners, heating/cooling coils, or any other equipment/ environments that could adversely affect relative humidity measurement.

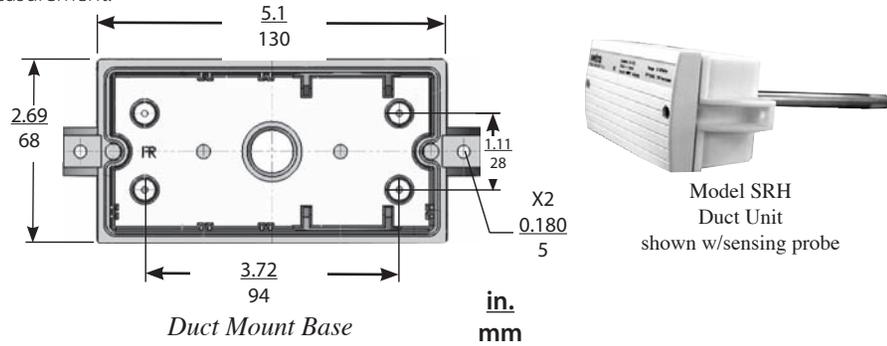


Insert sensing probe through hole (5/8" dia. minimum) and attach full assembly via the two holes on each side.

2.3 Outside Air Mount

The outside air configuration is supplied with a mounting bracket and two 10-16 x 1/2" hex head screws. Locate a position on the building that is clear of exhaust ducts, high exposure to the sun, direct rain, or other outdoor effects that could adversely affect the operation of the unit. Ideally, a sheltered area (under an eave) on the north side of the building is best to protect from the above effects.

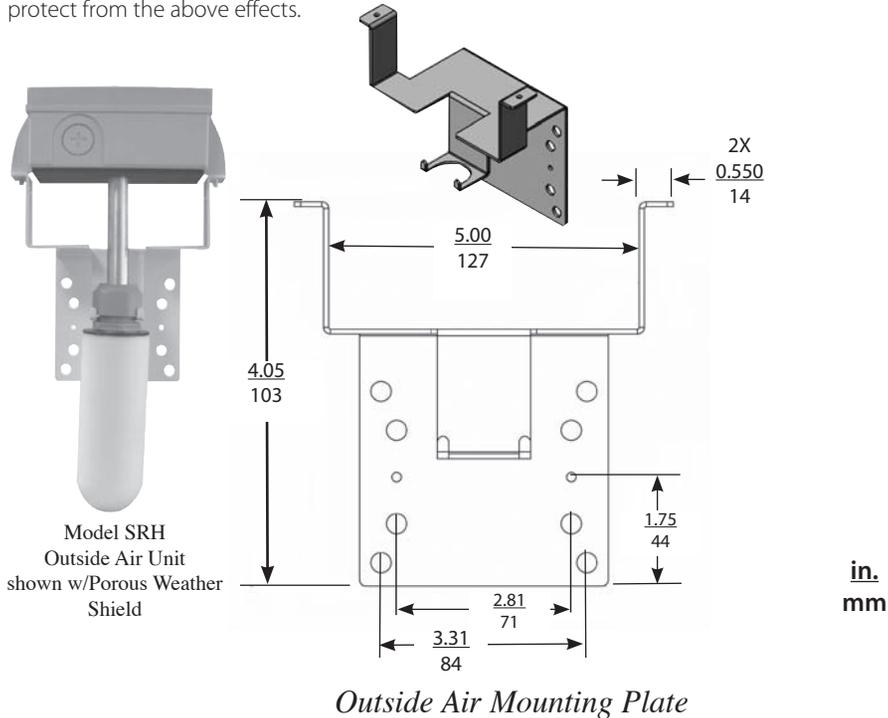

6.0 DIMENSIONAL DRAWINGS

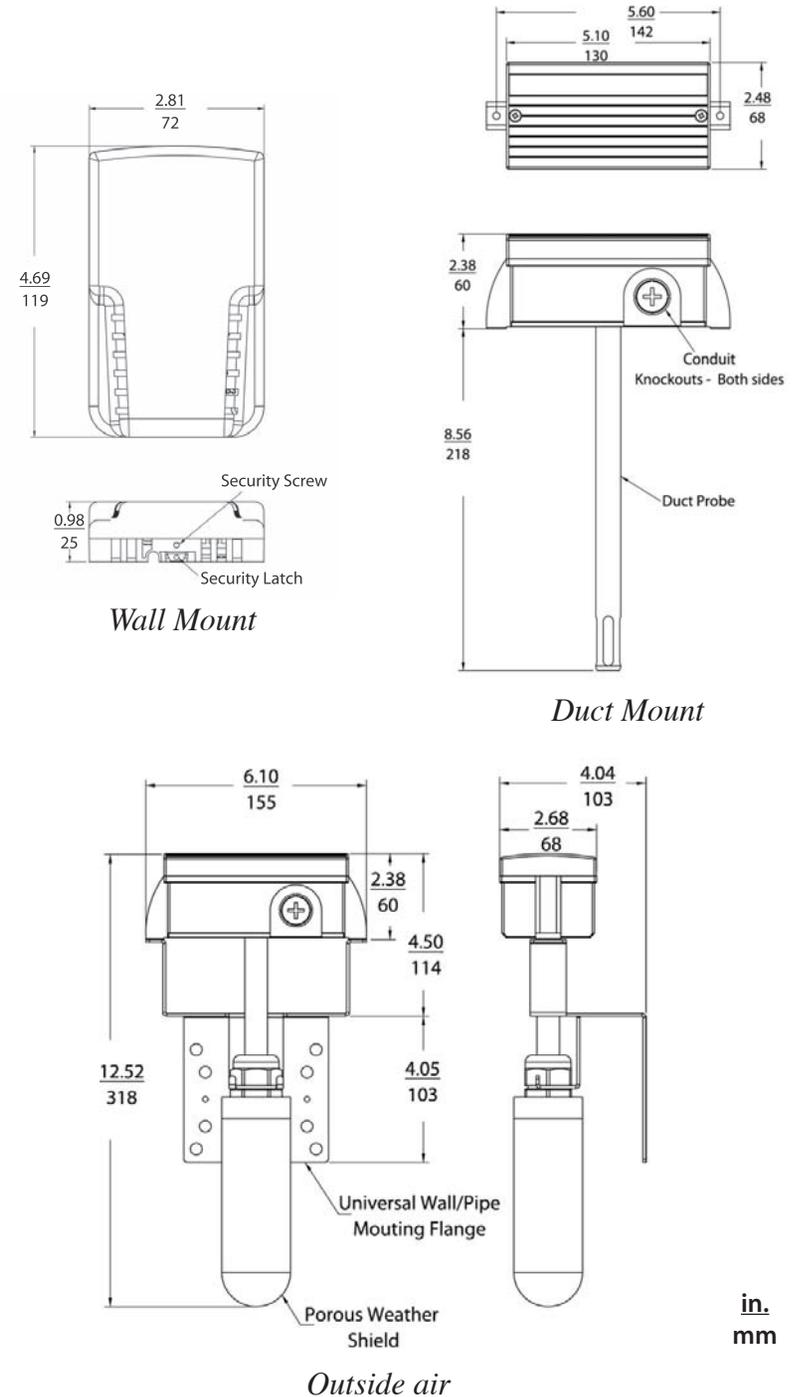

5.0 SPECIFICATIONS

RH Performance Data

Sensing Element	Capacitive Polymer
Humidity Operating Range	0 to 100% RH
Accuracy at 73°F (23°F)	2%, 3%, 5%
Hysteresis	<1.5%
Repeatability	<0.5%
Long Term Stability	<1%/year @ 73°F (23°C), 50% RH

Electrical Data

Signal Outputs	
Current (2-wire ckt.)	4 to 20 mA
Field Selectable Voltage (3-wire ckt.)	0 to 5 VDC, 0 to 10 VDC
Excitation	
0 to 10 VDC	13.5 to 30 VDC
0 to 5 VDC, 4 to 20 mA	12 to 30 VDC
Maximum Load (Current only)	$\Omega = (\text{Supply} - 10) / 0.02$
Electrical Termination	Pluggable Terminal Block
Wiring Protection	Reverse Excitation
CE Compliance	EN61236:1998

Environmental Data

Operating Temperature °F (°C)	-40 to 140 (-40 to 60)
Storage Temperature °F (°C)	-40 to 185 (-40 to 85)
Moisture Resistance	IP65, NEMA-4 (Duct & Outside Air)
Solar	UV Resistance (Outside Air)
Flammability Rating	94-V0
Compliance	RoHS and CE Compliant

Temperature Sensing Options

Passive Thermistor Options	NTC 10K Ω @ 77°F/25°C (Direct Connect) Type II
Passive RTD Output	1000 Ω @ 32°F/0°C (Direct Connect) 385 Platinum Curve
Signal Output Options	
Current (2-wire ckt.)	4 to 20 MA
Field Selectable Voltage (3-wire ckt.)	0 to 5 VDC, 0 to 10 VDC

Physical Description

Enclosure	
Wall Mount	ABS 94-V0
Duct & Outside Air	Poly Carbonate 94-V0
Probe (Duct & Outside Air)	Aluminum
Weather Shield (Outside Air)	Porous Polyethylene

3.0 ELECTRICAL INSTALLATION


3.1 Wiring

Match your transmitter with the corresponding diagrams and set the jumpers and wire accordingly. Ensure that all of the installation and wiring is in compliance with all national and local codes. Use 18-22 AWG shielded, twisted pair, copper conductors.

Caution: Do not bundle transmitter wires with AC power wires. Shield must be connected to earth ground for CE compliance.


Wall Mount

Connector/Jumper Locations - Inside cover

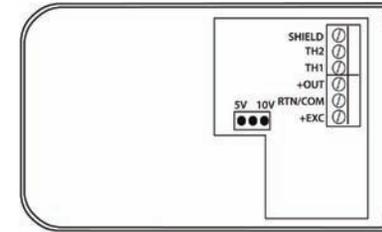

Duct and Outside Mount


Connector/Jumper Locations - Board Assembly/Duct Probe

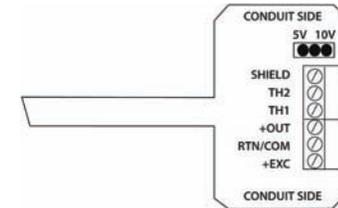

Wiring 0 to 5 V/0 to 10 V Output Units (3-wire)

Shield	6	Earth Ground Connection
TH2	5	Thermistor/PRTD Output
TH1	4	Thermistor/PRTD Output
+OUT	3	RH (0 to 5V/0 to 10V) Output
RTN/COM	2	Ground
+EXC	1	Vin

Selectable Outputs

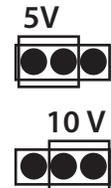

Note: Unit shipped in 0 to 5V Mode. Move jumper to right for 0 to 10V Output

Wiring 4 to 20 mA Output Units (2-wire)

Shield	6	Earth Ground Connection
TH2	5	Thermistor/PRTD Output
TH1	4	Thermistor/PRTD Output
+OUT	3	NC
RTN/COM	2	RH (4 to 20 mA) Output
+EXC	1	Vin

4.0 CALIBRATION

All relative humidity products are fully tested and calibrated prior to shipment in accordance with the National Institute of Standards and Technology (NIST), the highest quality standard available.

Once installed in the field, no calibration of the units is required. Instead, this product suite features field-replaceable sensor modules that allow the end user to replace the sensors on-site. This eliminates time consuming and costly factory calibration, while reducing downtime during service intervals. Additionally, the duct mount probe is easily accessed by taking off the front cover, removing the sensor board assembly, and replacing the sensor module on the tip of the sensor board. This further contributes to a more user-friendly, lower cost product line that is focused on customer needs and ease of use.

4.1 Remove/Install the Sensor Tip


Wall Mount




Outdoor and Duct Mount



Replaceable Sensor with Sintered Filter

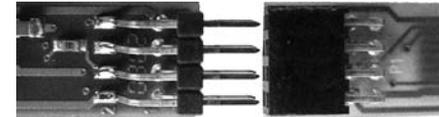

Top View

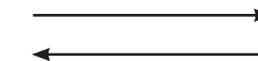

Side View

Replace sensor tip by holding the sides of the Sintered filter and pushing sensor pins into mating connector.

4.2 Ordering Information - Replacement Sensor Assembly

<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Model	Accuracy	Temperature Outputs	Options
SRH3 = SRH	2P = 2%	T0 = None (RH only)	C = NIST Calibration Certificate
	3P = 3%	T1 = 10KΩ NTC (passive)	
	5P = 5%	T2 = 1000Ω RTD (passive & analog)	

Example: Order Part No. SRH3-2P-T0-C = Sensor Assembly with 2% accuracy, RH only, and NIST Calibration Certificate